


Wall Switch Layout

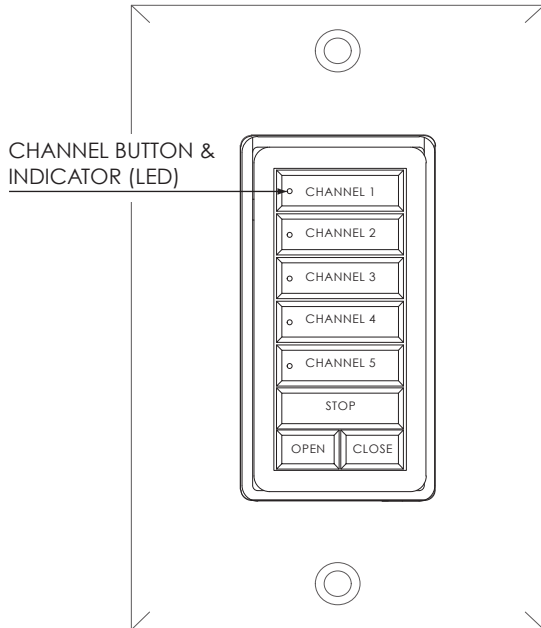

Instructions


For all following programming commands, the motor must be placed into “program mode”.

**Enter Program Mode** = Disconnect power to the motor for 30 seconds, then reconnect power to the motor. Motor stays in program mode for 90 seconds.

**Pair Handsender to Motor / Learn Channel**

 *Expected Response:*

Select desired channel, then hold Open and Close.



- The wallswitch will give a slow blink
- After 3-5 seconds, the motor will jog
- Motor will now work on this channel
- Note: Each motor can learn up to 4 channels

**Delete Channel from Motor**

Select desired channel, then hold Stop and Open.



- The wallswitch will give a slow blink
- After 3-5 seconds, the motor will jog
- Motor will no longer respond to this channel

**Reverse Motor Direction**

Select desired channel, then hold Stop and Close.



- The wallswitch will give a slow blink
- After 3-5 seconds, the motor will jog
- Travel direction is now reversed