


Handsender Layout

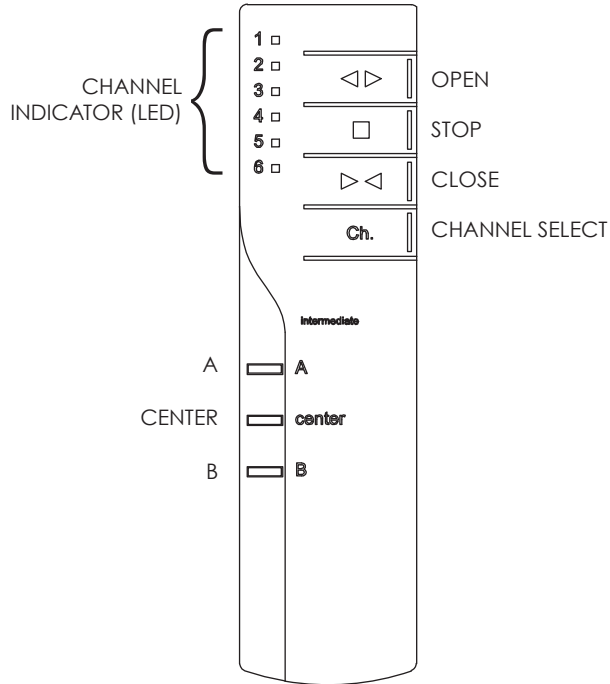

Instructions

For all following programming commands, the motor must be placed into "program mode".

Enter Program Mode = Disconnect power to the motor for 30 seconds, then reconnect. Motor stays in program mode for 90 seconds.

Pair Handsender to Motor / Learn Channel *Expected Response:*

Select desired channel, then hold Open and Close.



- The handsender will give a slow blink
- After 3-5 seconds, the motor will jog
- Motor will now work on this channel
- Note: Each motor can learn up to 4 channels

Delete Channel from Motor

 
Select desired channel, then hold Stop and Open.



- The handsender will give a slow blink
- After 3-5 seconds, the motor will jog
- Motor will no longer respond to this channel

Delete All Channels

Hold Stop and Close.



- The handsender will give a slow blink
- After 3-5 seconds, the motor will jog
- Motor will no longer respond to any channel

Reverse Motor Direction

Hold Stop and Close.



- The handsender will give a slow blink
- After 3-5 seconds, the motor will jog
- Travel direction is now reversed