
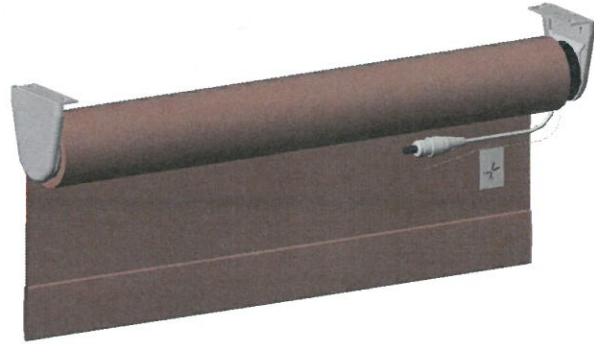


Installing Motorized Roller Shade

25E RF Motorized Roller Shade



1. Your system should come with a Roller Shade Assembly, Mounting Brackets, Bracket Covers, Battery Wand, and a Control Device (if purchased).

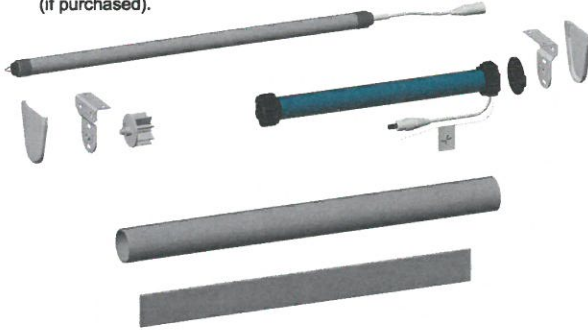


5. Mount Battery Tube to wall as close to Roller Shade as possible. Motor power lead and Battery Tube make up a length of 15".



6. Connect Battery Tube Power lead to Motor lead as shown below.

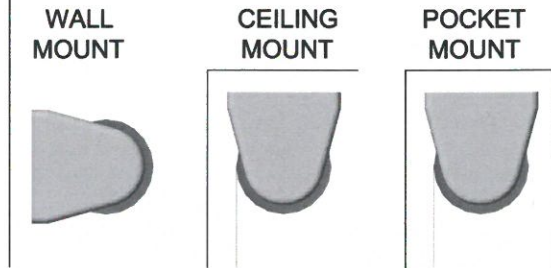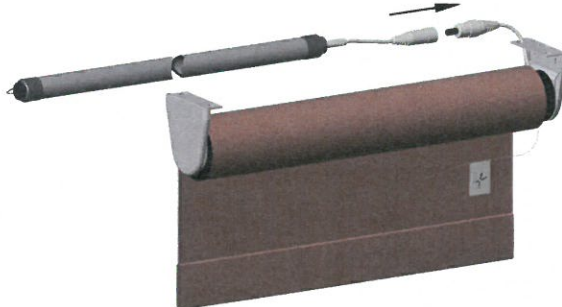

2. Level and mount brackets to a solid surface. Ensure solid blocking, use anchors when necessary.

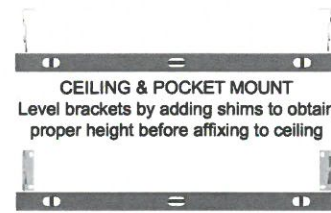

WALL MOUNT  
Level wall brackets to proper height before affixing to wall




CEILING & POCKET MOUNT



WALL MOUNT

Note: Installer to provide wall anchors and screws appropriate to the surface material and weight of the product. Metal, self-drilling anchors are recommended for drywall.

3. Mount Roller Shade by hooking Motor End into Bracket slots then compress Idler Pin and insert into center hole of Bracket.

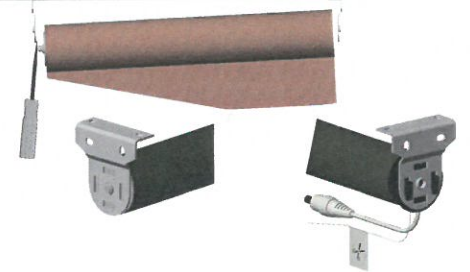

4. Install Bracket Covers (If Desired).

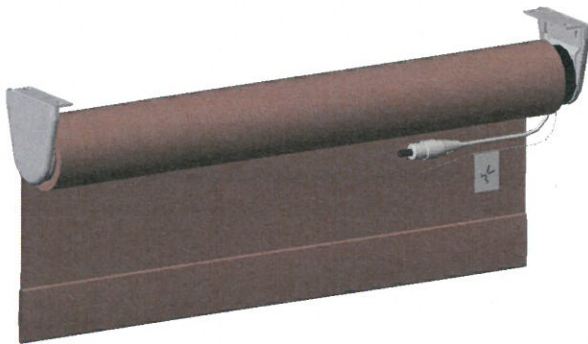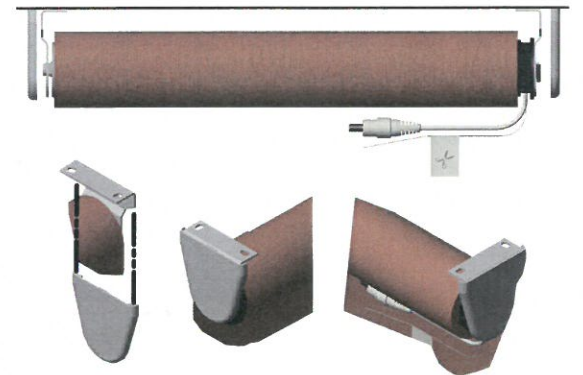

25E RF Systems

Roller Shade installation is complete.

If your System needs to be Programmed, Please refer to the Appropriate Programming Instructions for this Product.

Enjoy your new BTX Intelligent Fashion Window Coverings product. For support or more information, email [btxwindow@btxinc.com](mailto:btxwindow@btxinc.com) or call (800) 422-8839.